

## 410

## Radial Thrust, Non-Precision Bearing

## **Specifications**

Bearing Type: Flanged Unground

Commercial

Load Capacity: 300 lbs.

Mounting Type: Press Fit \*

Tube Size/Gauge: 1.9" x 12g

Max OD of Body: 1.712"

Bore Size & Type: 7/16" - Hex

Extension: 7/32"


**Lubrication:** Oil or Grease

**Temperature Range:** Oil, -10 to 400 F°

Grease, -40 to 300 F°

Regreasable: No – Maintenance Free



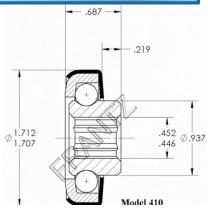

Part Number for Ordering:

Oil - 0410226023 Grs - 0410226123

## Applications: Benefits & Features

Radial Thrust Non-Precision Bearings:

In certain applications, conveyor bearings are subjected to lateral forces particularly in turns, merges, and loading areas. For these situations, FRANTZ has designed conveyor bearings with a single heat treated outer race and ball complement enclosed by a shell. This design provides a durable "corner" to withstand the lateral forces permitting longer conveyor bearing life. Radial Thrust Conveyor Bearings perform perfectly well in situations where force is linear too, but give you the corner when it is needed. FRANTZ Non-Precision bearings offer the least rolling resistance, lower energy consumption and overall a greener option. Engineered to accommodate more axle deflection due to heavy loads or shock, especially when used in longer rollers (as compared to Precision or Semi-Precision bearings), often making non-

precision bearings the product of choice in many conveyor designs.

Targeted Applications: Gravity conveyors for distribution/warehousing, food & beverage, air cargo/airports,

manufacturing equipment and packaging equipment. The 410 bearing along with other 400 series bearings, are often used as a replacement for Litton bearings. Litton Unit Handling Systems no longer manufactures bearings, however their products had an extensive installed

base, occasionally still seen in operation today.

Long Life: FRANTZ non-precision bearings are engineered and tested to exceed the CEMA standard of

one million revolutions.

<sup>\*</sup> In Press Fit application, FRANTZ recommends a tube inside diameter with no less than 0.003" to 0.008" press fit interference. Contact FRANTZ Customer Service if you have questions regarding Press Fit applications.